


INSTRUCTION MANUAL

SOLAR LED WALL LIGHT

CCT CHANGEABLE

INSTALLATION INSTRUCTIONS

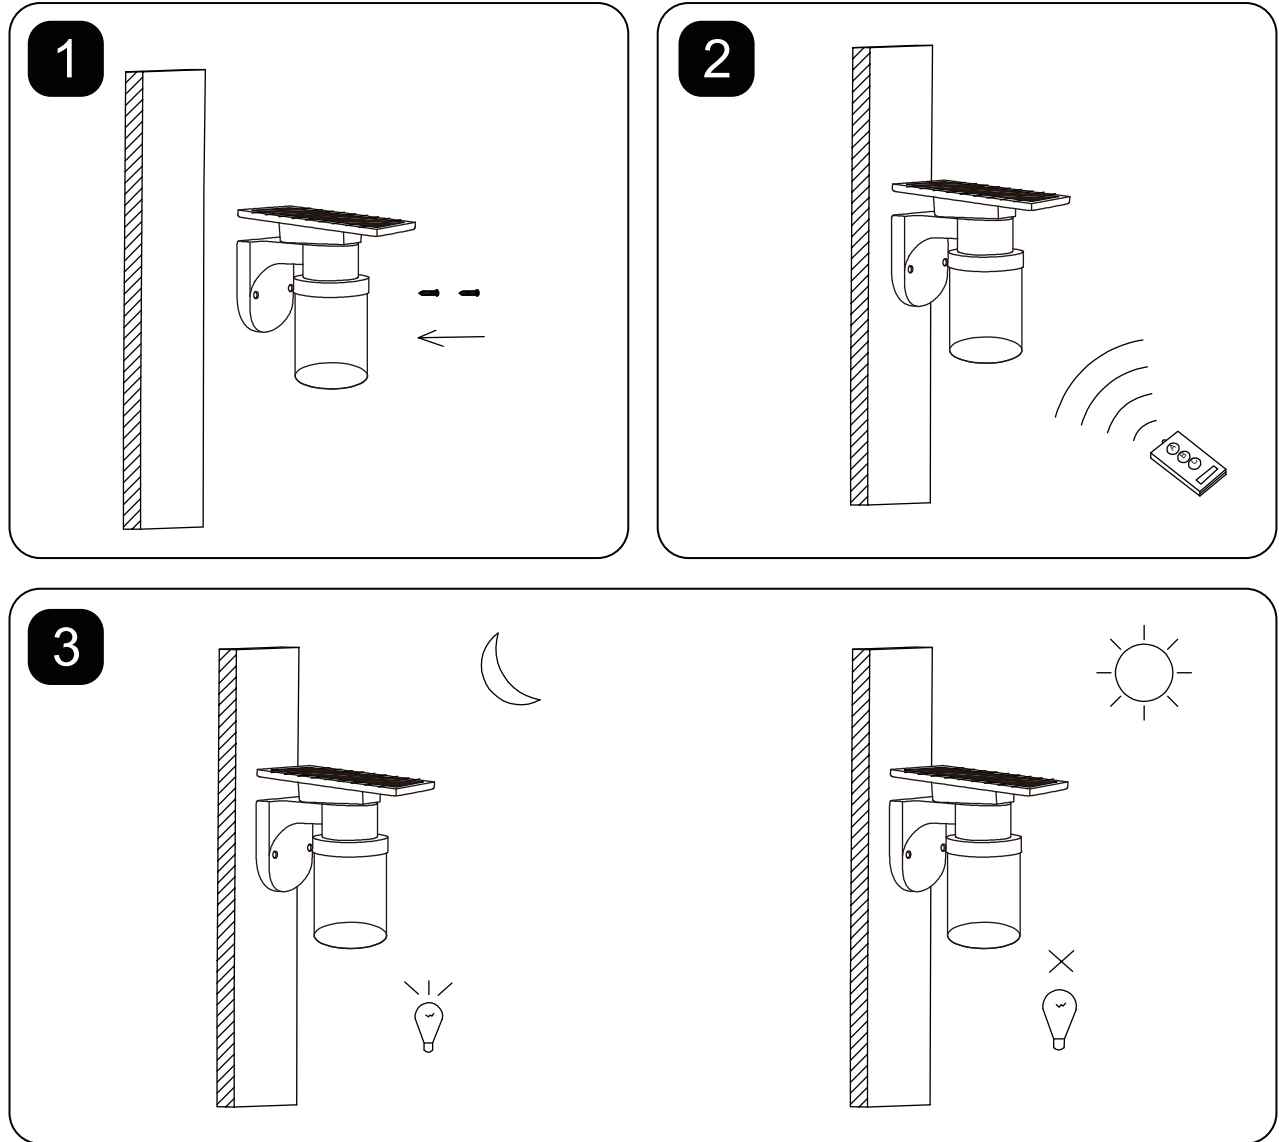

- Screw the light fixture onto the wall.
- Remote control the lighting switch and color temperature.
- The lights are on at night and off during the day.

AUTOMATIC LIGHTING FEATURE

Ensure the switch is set to the ON position. The light will automatically illuminate at night and turn off at dawn